

2019 BMW 330i xDrive Sedan (G20) L4-2.0L Turbo (B46D)
Vehicle > Engine, Cooling and Exhaust > Engine > Engine Lubrication > Oil Filter > Service and Repair > Removal and Replacement
REMOVING THE ACOUSTIC COVER [REP-TAT-P-1112-01-G20_B48]

Removing the acoustic cover

REP-TAT-P-1112-01-G20_B48

 WARNING

- Hot surfaces.
- Risk of burning!
- Perform all work only on components that have cooled down.

 RISK OF DAMAGE

- Damage to the acoustic cover / design cover.
- Jerky movements during disassembly and application of excessive force during installation may result in breakage of the acoustic cover / design cover.
- Disassemble or mount the acoustic cover / design cover carefully.
 - Disassemble or mount snap-lock couplings of the ball pivots one after the other.
 - Disassemble or mount the acoustic cover / design cover only at temperatures > 20 °C.
 - Use only distilled water as an auxiliary material during installation, no lubricants.



- Unclip acoustic cover (1) upwards from the holders in the **marked** areas.

Removing And Installing/Replacing Full-Flow Oil Filter Completely		
Back To Step 2	Step 3 of 48	Go To Step 4