

2019 BMW 330i xDrive Sedan (G20) L4-2.0L Turbo (B46D)

Vehicle > Engine, Cooling and Exhaust > Engine > Engine Lubrication > Oil Filter > Service and Repair > Removal and Replacement

REMOVE THE INTEGRATED POWER SUPPLY MODULE (PDM) [REP-TAT-P-1263-01-G20_B48]

Remove the integrated power supply module (PDM)

REP-TAT-P-1263-01-G20_B48

Further information is available.



WARNING

Working on 12 V electrical system.

Risk of short circuits! Risk of fire!

- Make sure that there is **no charger** connected to the jump start terminal in the engine compartment.
- Detach battery ground lead from battery.
- For auxiliary batteries: Detach battery minus cables from all auxiliary batteries.



RISK OF DAMAGE



Electrostatic discharge.

Damage to or destruction of electrical components.


- Leave the electrical components in their original packaging until they are being installed. Only use the original packaging for returning the product. Always package removed components straight away.
- Read and comply with user information on using the associated special tool 12 7 060.
- Only tap the housings of electrical components. Do not tap pins or multi-pin connectors directly.
- Wear electrically conductive clothing and antistatic shoes (with ESD symbol).
- For additional information see: 61 35 ... Notes on ESD (electrostatic discharge) protection

61 35 ... Notes on ESD protection (Electro Static Discharge)

61 35 ... Notes on ESD protection (Electro Static Discharge)



- Unlock and disconnect plug connections (1).

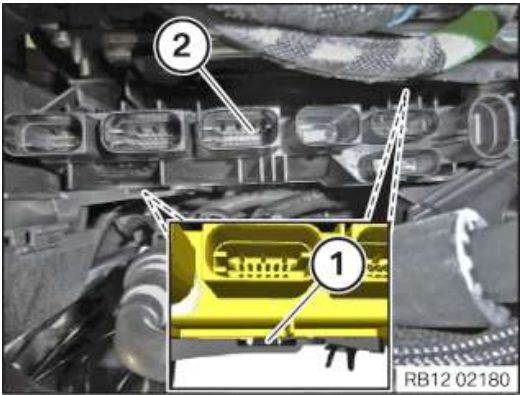

- Unlock the detents (1).
- Feed out and remove the integrated power supply module (PDM) (2) upwards.

Removing And Installing/Replacing Full-Flow Oil Filter Completely		
Back To Step 5	Step 6 of 48	Go To Step 7