

2019 BMW 330i Sedan (G20) L4-2.0L Turbo (B46D)

Vehicle > Engine, Cooling and Exhaust > Engine > Engine Lubrication > Engine Oil > Service and Repair > Procedures

REMOVING THE OIL FILTER ELEMENT [REP-TAT-P-1142-01-G20_B48]

Removing the oil filter element

REP-TAT-P-1142-01-G20_B48

WARNING

Hot fluids.

Risk of scalding!

- Conduct all work in the vehicle wearing appropriate personal protective equipment only.

WARNING

Hot surfaces.

Risk of burning!


- Perform all work only on components that have cooled down.

RISK OF DAMAGE

Contaminant or foreign body.

Contamination can result in malfunctions, loss of function or leaks.


- Adhere to the utmost cleanliness.
- Protect components from contamination e.g. by covering.
- Close off line connections with seal plugs.

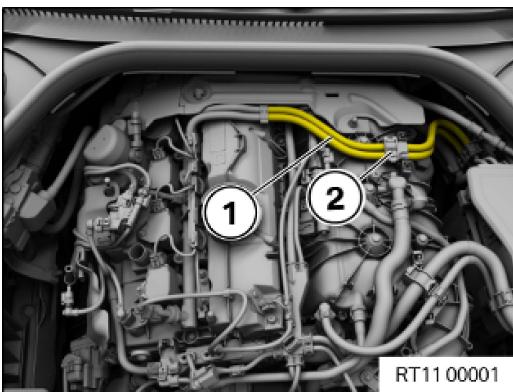

- Unclip the engine wiring harness (1) from the bracket (2) and move it to the side.



- Loosen the oil filter cover (1).

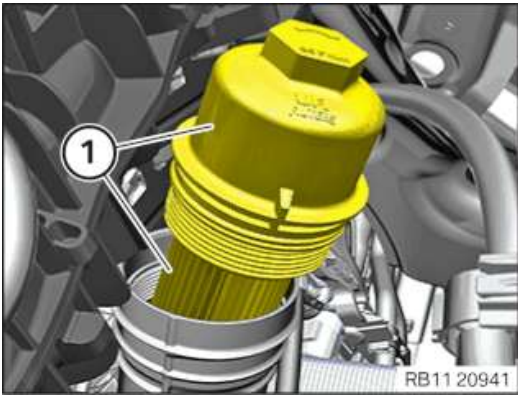

i TECHNICAL INFORMATION

Collect and dispose of emerging fluids. Observe country-specific waste disposal regulations.

- Feed out the oil filter cover with the oil filter element (1) upwards and remove.

Engine Oil Service		
Back To Step 2	Step 3 of 13	Go To Step 4