

2019 BMW 330i xDrive Sedan (G20) L4-2.0L Turbo (B46D)

Vehicle > Engine, Cooling and Exhaust > Engine > Engine Lubrication > Oil Filter > Service and Repair > Removal and Replacement

INSTALLING THE OIL FILTER ELEMENT [REP-TAT-P-1142-02-G20_B48]

Installing the oil filter element

REP-TAT-P-1142-02-G20_B48




RISK OF DAMAGE


Contaminant or foreign body.

Contamination can result in malfunctions, loss of function or leaks.

- Adhere to the utmost cleanliness.
- Protect components from contamination e.g. by covering.
- Close off line connections with seal plugs.

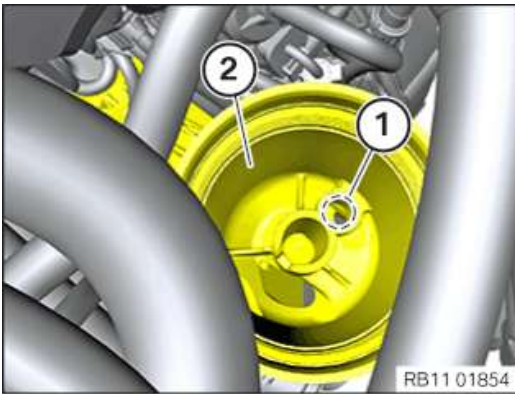

- Position oil filter cover with the oil filter element in the guide bore hole (1) in the oil filter housing (2).

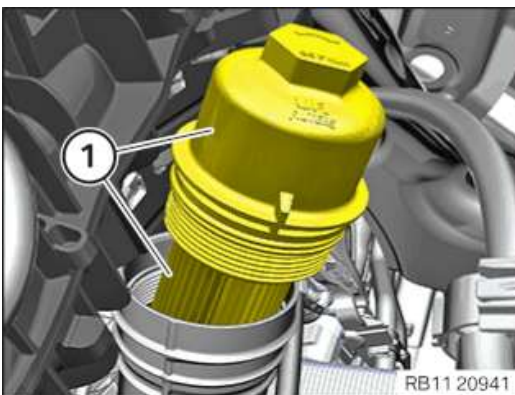

- Install the oil filter cover (1) including oil filter element.




- Tighten the oil filter cover (1).

Tightening torques

Oil filter cover to oil filter module

O-ring lightly oiled.	Tightening torque	25Nm
-----------------------	--------------------------	------

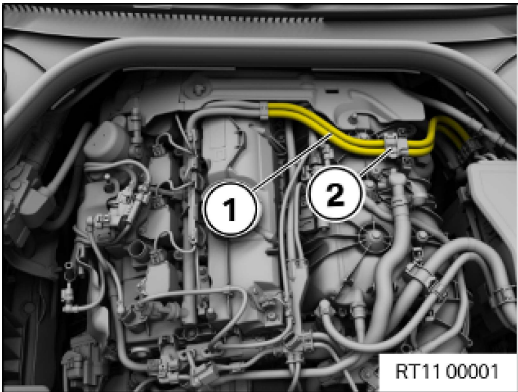

- Clip the engine wiring harness (1) into the holder (2).

Removing And Installing/Replacing Full-Flow Oil Filter Completely		
Back To Step 25	Step 26 of 48	Go To Step 27