

2019 BMW 330i Sedan (G20) L4-2.0L Turbo (B46D)
Vehicle > Powertrain Management > Ignition System > Spark Plug > Service and Repair > Removal and Replacement
INSTALL ALL IGNITION COILS [REP-TAT-P-1213-02-B48_1]


Install all ignition coils

REP-TAT-P-1213-02-B48_1

 NOTE

The description is for one component only. The procedure is identical for all further components.

► Install ignition coil

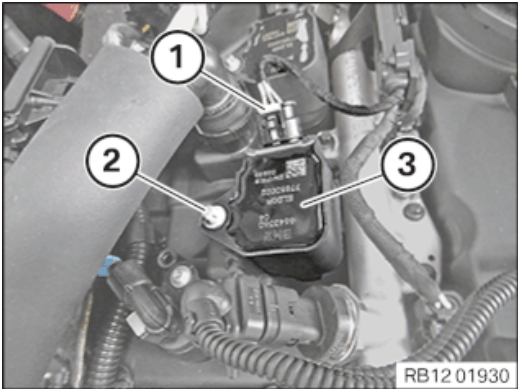


- Install ignition coil (3).
- Tighten down screw (2).

Tightening torques

Ignition coil		
screw	Tightening torque	8Nm

- Connect connectors (1) and lock.
The connector (1) must engage audibly.

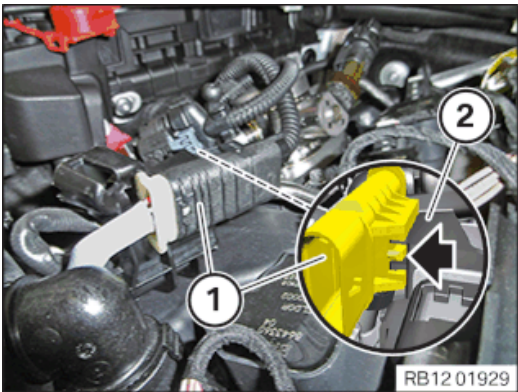

- Connect the connector (1) with the holder (2) and lock (arrow).
The connector (1) must engage audibly.



- Connect connectors (1) and lock.
The connector (1) must engage audibly.



Spark Plugs Service		
Back To Step 5	<i>Step 6 of 8</i>	Go To Step 7